


NVR network connection method

1 . Do not connect NVR to router modem all-in-one, some router modem all-in-one cannot correctly identify the NVR system, NVR is recommended to connect to router, please see the picture




NVR connection network steps


1. The NVR is connected to the router using the Ethernet cable, and the green or yellow LED on the RJ45 port on the back of the NVR is blinking

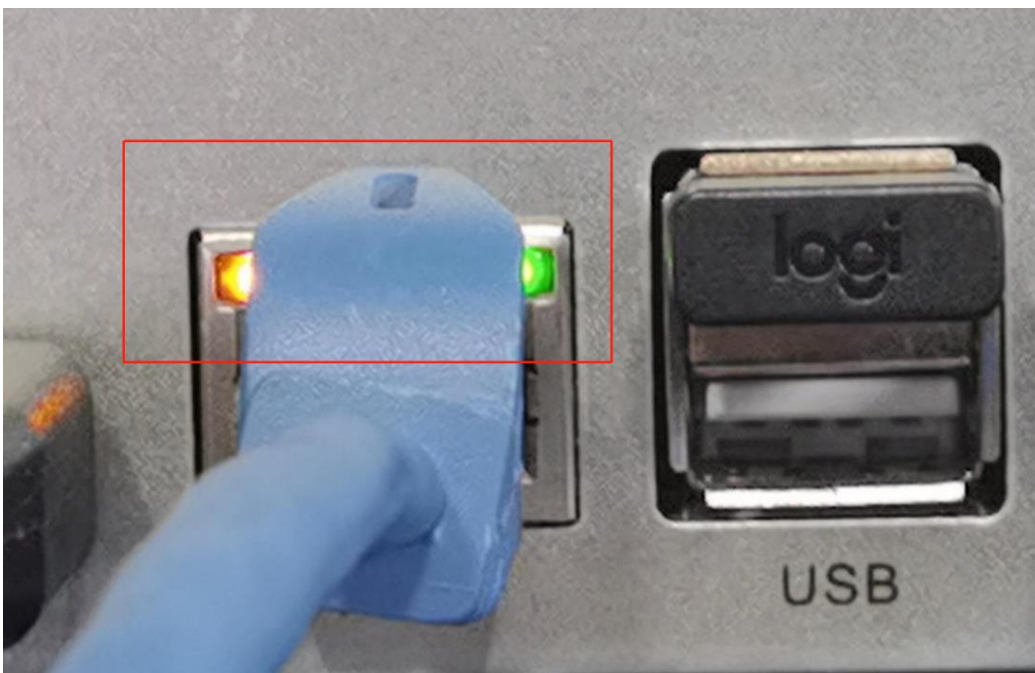

2. NVR display interface, click the right mouse button, select Fast NetWork

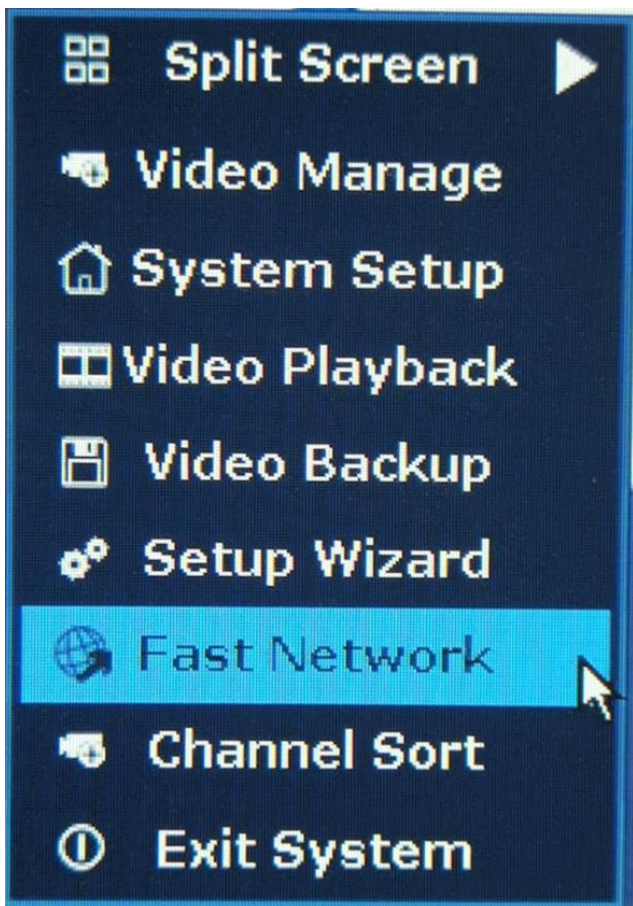

3. Usually NVR can identify Network Status: Healthy Network
cloud ID : ONLINE

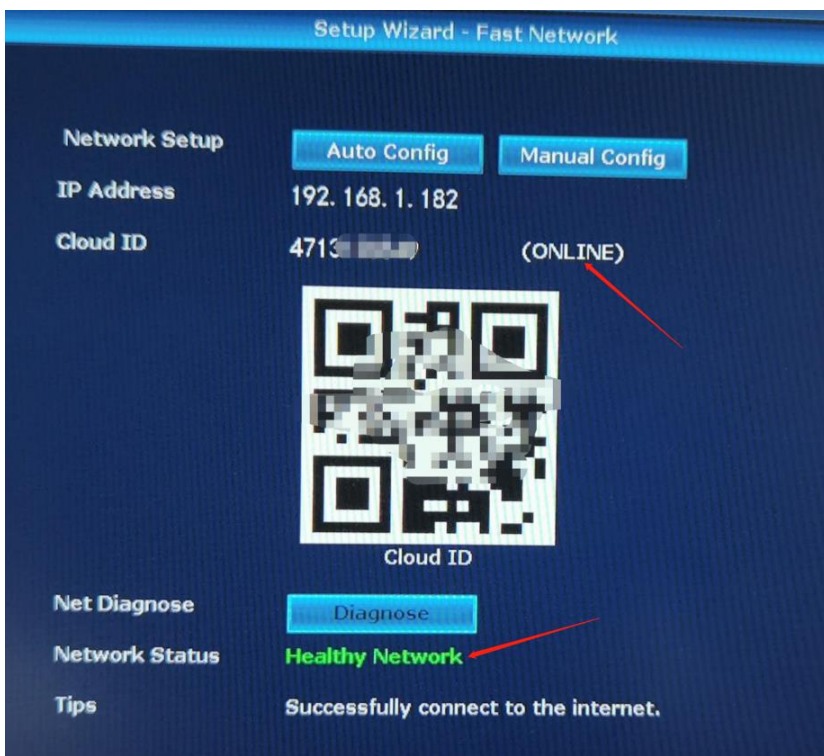

4. If the NVR does not recognize your network Click on Auto Config Network Status: Updating... Wait, it will automatically switch to Healthy Network

